



# The Classic Carry Pouch Instructions


The Classic Carry Pouch is designed to give optimum comfort and support to parent and baby. Newborn babies cradle snugly inside the NEW adjustable pouch shell. The NEW adult waist belt takes weight off the shoulders, making carrying baby more comfortable.

**Please follow the instructions carefully to ensure correct fitting.**


**Warning: When carrying baby do not bend at waist when stooping down, bend at knees to ensure baby stays secure in pouch. Adults should limit activity to walking only whilst using pouch.**

## Facing In (Option 1)


Suitable for 0 – 12 mths or a comfortable carrying weight.

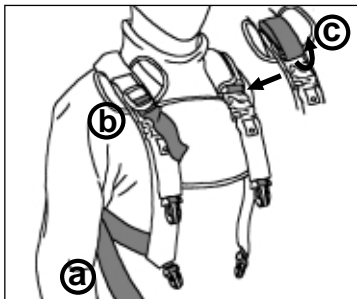

1. Fit adult harness and adjust strap (a) for a comfortable fit. Attach bib to snaps on harness. Adjust strap (b) (short for facing in – longer for facing out) and roll up excess strap under velcro cover (c).

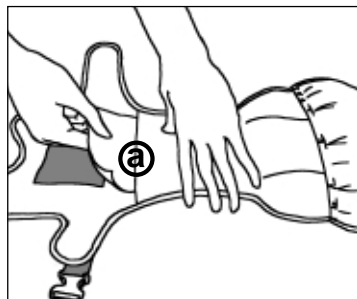


2. Adjust the size of baby pouch by pulling flap (a) over the velcro pad. The more you pull the flap out the smaller the pouch becomes. Press down on velcro to secure.

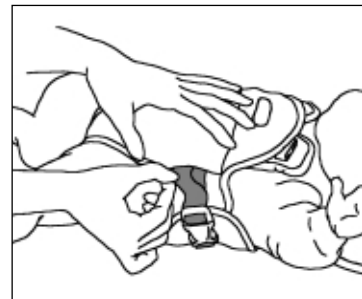


3. Lay baby on the pouch and position the front panel so that the side buckles are at the baby's waist. For larger babies, feed webbing through the tabs before buckling at the side. Adjust webbing for a snug fit then tidy excess strap into front of pouch.



4. While holding baby, swing the crutch flap through to the front of pouch.

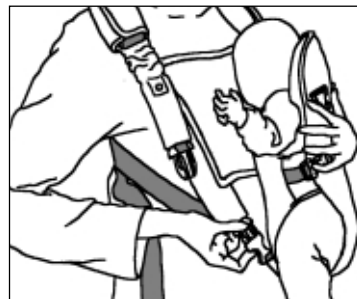


5. Buckle crutch flap to the bottom buckles on the adult harness.

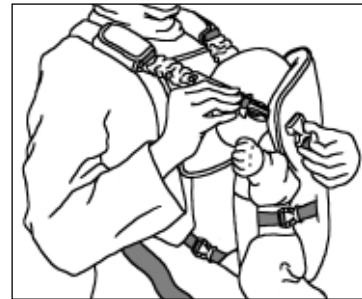

6. Holding baby securely, attach baby's shoulder straps to top of pouch. Tighten strap to bring baby closer – release for more freedom or for breast feeding.


## Facing In (Option 2)

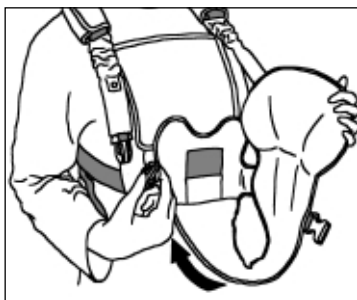

1. Swing through crutch flap on the pouch and attach pouch front to the bottom buckles on the adult harness. Buckle the baby's shoulder strap and side waist belt on one side, leaving the other side open.



2. Carefully ease baby into pouch and while holding securely, buckle remaining shoulder strap.

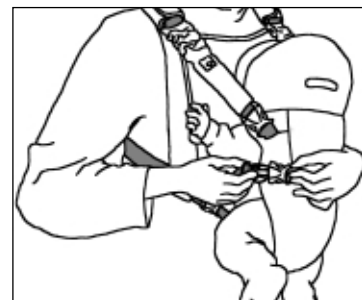

3. Buckle remaining side waist belt and adjust for a comfortable fit. Make any other necessary adjustments to ensure a comfortable fit for both you and your baby.

## Facing Out

Suitable for approx 4 mths -12 mths or a comfortable carrying weight.


*Caution: When using pouch in this position do not cook or be within reach of hot or dangerous objects.*



1. With baby fitted in pouch, turn baby to the facing out position.




2. While holding baby, swing crutch flap through to the back of pouch and attach to buckles on the bottom of the adult harness.

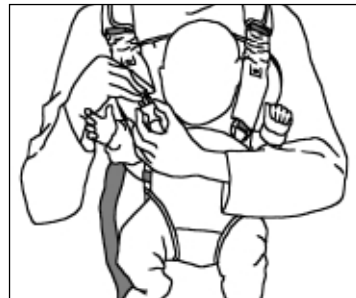


3. Still holding baby, buckle the baby's lengthened shoulder straps into the buckles tucked behind the front "Kapoochi" panel. Adjust to ensure baby is secure.


## Waist belt ( optional ) - Pouch can be worn without the waist belt

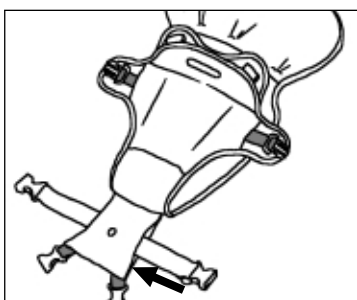

1. Detach crutch strap from waist belt. Feed crutch strap through the centre of the pouch crutch flap and snap into position.

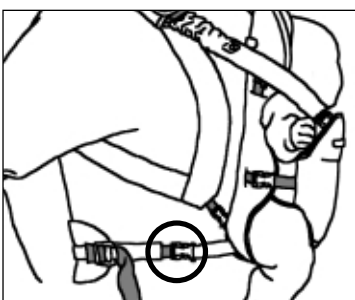


2. Fit baby in either the "facing in" or "facing out" position ( as shown in previous instructions ). Buckle the crutch strap to the waist belt.

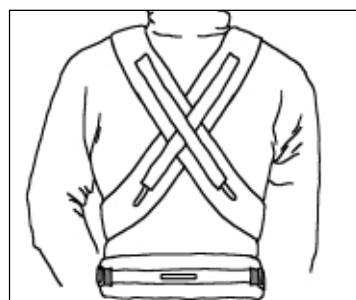

3. Tighten waist belt to take the weight of your baby.

## To Breast or Bottle Feed

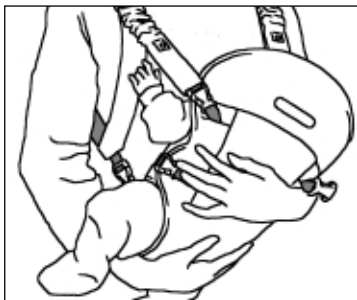

1. To tilt baby for feeding, simply lengthen the baby's shoulder straps and release the buckle on the side you wish to feed from.




1. Detach baby from adult harness. Tuck the crutch flap inside the pocket on the front of pouch.



2. Place baby in shopping cart, release the side buckles and lengthen strap. Feed strap through the bars and buckle behind. Adjust for a comfortable fit. **Warning:** Do not leave baby in shopping cart unattended.

## Storage

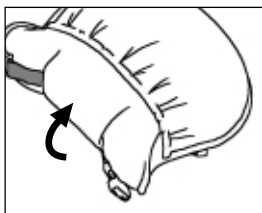





1. To fold pouch into a convenient carry pack: Lay pouch out flat and fold side buckles into the centre front.  
2. Fold pouch twice, then once again tucking it into it's own pocket.

## Guarantee

The Classic Carry Pouch is guaranteed for two years against defective workmanship and materials. Kapoochi will repair or replace (at it's option) the product free of charge if such a defect appears within the guarantee period. Guarantee does not cover normal wear and tear or misuse. Please inspect pouch regularly.

## Care instructions:

• 100% Cotton  Machine wash separately - gentle cycle-warm water  Do not tumble dry or bleach.  Do not iron.  Dry out of full sun



Manufactured for Kapoochi • Ph 61 7 5478 6388 • Fax 61 7 5478 6377

• Distributed in Australia Freecall 1800 50 16 80 • Distributed in New Zealand Freecall 0800 885 995

Website: [www.kapoochi.com](http://www.kapoochi.com)